



Limited Warranty

The Omega Nutrition Center is warranted for 5 years from the date of purchase against defects in materials and workmanship. The Omega Nutrition Center will be repaired or replaced at Omega's option during the 5 year period. This warranty is for normal household (non commercial) use and does not cover damage occurring during shipping or product failure as a result of accident, misuse, alteration, abuse, neglect or improper maintenance. The 5 year warranty is effective only if the product is purchased in United States. This warranty applies only to units used in accordance with supplied instructions. Warranty is void if unit has been altered or modified without Omega's authorization. Removal or rendering serial number illegible voids your warranty. Warranty card must be completed and sent to Omega within 30 days of purchase (or receipt as a gift). A service charge of \$10.00 must accompany any unit over one (1) year old. For service, send juicer or part to the following service center.

Omega Products, Inc

6291 Lyters Lane
Harrisburg, PA 17111

For additional service or operational information, please contact Customer Service at Omega Products, Inc. directly

Phone: 717-561-1105

Fax: 717-561-198

E-mail: omega@omegajuicers.com



NUTRITION CENTER

Model 8001

Manual



The Omega Nutrition Center helps you

- Juice fruits and vegetables
- Juices wheatgrass and leafy greens
- Mince herbs & seasonings
- Make noodles and bread sticks
- Make baby food and sorbets

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not put the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- **DO NOT** use outdoors.
- **DO NOT** let cord hang over edge of table or counter.
- Always make sure juicer cover is clamped securely in place before motor is turned on.
- Be sure to turn switch to **off** position after each use of your juicer.
- **DO NOT** put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in the opening, use the plunger or another piece of fruit to push it down. When this method is not possible, turn the motor **off** and disassemble juicer to remove the remaining food.
- **DO NOT** plug in until familiar with all the instructions and operating procedures.
- **DO NOT** unplug from electrical outlet by pulling on the cord. To unplug, grasp the plug, not the cord, and pull.
- Turn off all controls before unplugging from or plugging into an electrical outlet.

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



This heavy-duty juicer features a patented stonemill-like screw, made of hygienic U.S. FDA-approved polycarbonate and melamine which prevents poisonous heavy metals from mixing with your fresh juices.

Omega Juice Nutrition Center's low speed ensures full taste and nutrition. Nothing is lost through heated elements in your juicer.

The **Omega Juice Nutrition Center** is easy to assemble and take apart for quick cleaning.

 
Omega Juice Nutrition Center assures you of many years of trouble-free and dependable service. Five year warranty on all parts and labor.

Multi-Purpose Juicer/Food Processor

- 1. Fruit Juice Extractor** – The **Omega Nutrition Center** efficiently juices soft and hard fruits: even citrus fruits, usually one of the hardest fruits to juice.
- 2. Vegetable Juice Extractor** – The **Omega Nutrition Center** juices all kinds of vegetables, including celery, carrots, peppers, radishes, cabbage without destroying the natural flavor and nutrition. Fresh taste, full nutrition are guaranteed with this unique extraction process.
- 3. Grass Juice Extractor** – Wheat grasses, aloe leaves and pine tree needles are just some of the other natural products which can be juiced with the **Omega Nutrition Center**. Enjoy the best that nature offers in raw foods of all kinds and juice them for full nutritional benefits.
- 4. Food Processor** – The **Omega Nutrition Center** also chops and minces, providing natural flavor and nutrition from garlic, scallions, red pepper, ginger, radish and many other foods, including herbs and seasonings. Soft foods for special diets for babies and geriatric patients are quick and easy to prepare with the chopper attachment.
- 5. Pasta Extruder** – Make fresh spaghetti, linguini or breadsticks in just minutes with the included pasta extrusion nozzles. See page 6 for use.
- 6. Homogenizer** – Make fresh frozen desserts, baby food, Nutter Butters, from fresh fruits and vegetables.

Specifications

Model Name	Omega 8001 Nutrition Center
Dimensions	Length: 16" (40cm) Width: 7½" (19 cm) Height: 13½" (40 cm)
Voltage	120V/60Hz (100W power)
Motor	Single-phase induction
Screw RPM	75 - 90
Fuse	8A 250VAC

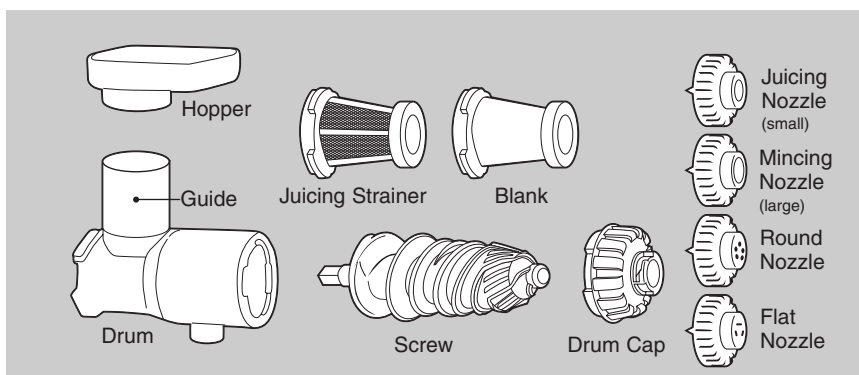

1 Place the screw into the drum. Insert the juicing strainer into the drum. Place the drum cap onto the drum end and turn it counter-clockwise until it clicks firmly into place.

 
2 Adjust the juicing or mincing nozzle to suit the material being processed. Refer to “How to Choose the Right Nozzle” page 5.

3 Connect assembled drum set with main body by turning lock clip clockwise (about 60°). Place hopper onto guide.


4 Place juice bowl and waste bowl under drum set. Plug power cord into wall outlet.

5 Press the ON button. Place a few pieces of cut fruit or vegetables, one at a time into the guide. Use the food pusher to press the fruit or vegetables gently down the guide. Leave the machine on as you feed in the fruits/vegetables.

- 6** DO NOT place any metal objects into the hopper. If the drum set is plugged or the machine stops operating, press the reverse button 2 to 3 times and press the on button again to resume normal operation.

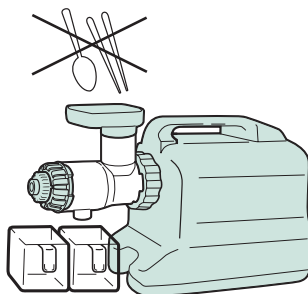

 - 7** Switch the juicer OFF before changing accessories or touching any moving parts. Remove the drum set from the main body by turning the locking clip counter-clock wise. Pull the screw forward to disassemble it from the drum set. After each juicing wash all parts in warm soapy water. Do NOT place any of the juicer accessories in the dishwasher.

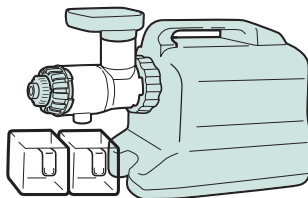

- 8** Do NOT run juicer for more than 30 minutes continuously at any one time.

Choosing the Right Strainer and Nozzle

Material

Apples, oranges, pears
grapes, strawberries,
kiwi fruit, tomatoes,
avocadoes, aloe plant

Strainer

Juicing Strainer

Nozzle

Nozzle, Notch 1

Pine tree leaves, kale,
radishes, beet tops, (fruit)
spinach, carrots, yams
wheat grass

Juicing Strainer

Nozzle, Notch 2

Red/green pepper,
garlic, ginger, herbs,
soaked rice and beans,
fresh fish and meat

Mincing Strainer

 
Bread Stick Nozzle

Making Pasta

- 1** Open drum cap.
Replace juicing strainer with mincing strainer.

Turn drum cap counter-clock-wise until it clips firmly into place.


Set the Nozzle at Notch II.

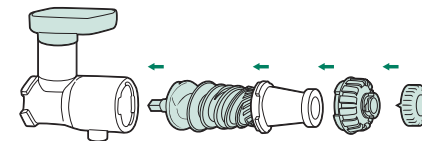


- 2** Sprinkle a small amount of wheat flour on the holding dish, placed under the spout.

Press ON button.

 Push pasta dough through the food guide without stopping.

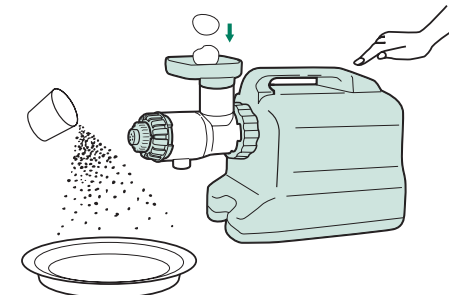

 - 3** Use scissors to cut the pasta to desired lengths. Cook according to recipe used.

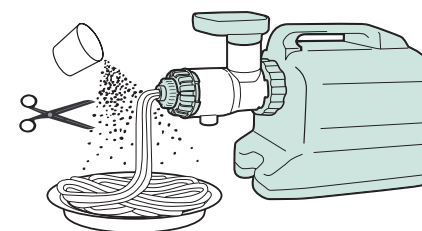

- 4** Disassemble unit and rinse all parts and accessories first in cold water. Then wash in warm soapy water in your sink — NOT in your dishwasher.

Cleaning instructions

Wash the **Omega Nutrition Center's** screw and parts in warm, soapy water in your kitchen sink and rinse well.

Do Not Place Parts Or Accessories In Your Dishwasher.

Do not immerse unit in water. Clean with a damp cloth.